



OPERATING INSTRUCTIONS



1. BATTERY INSTALLATION

The X-LIGHT/X-WIRE works with 2, 1,5 volts LR03 type mini batteries. Open the cover of the battery compartment on the back of the remote and insert the batteries with special attention to respect the polarity. The transparent Device keys will emit 3 flashes to indicate that X-Light/X-Wire is ready to be programmed.



2. NEW COMPUTER PROGRAMMING (valid only for X Light version)

This innovative system patented by Visa Electronics lets you program and operate in few seconds the new remote X-Light, choosing from more than 500,000 models of devices available in the catalogue that are constantly updated with news that occur in the market.

For example, suppose you want to program X-Light for a TV

1	Connect to the web site www.xlightvisa.it dedicated to this product, enter the <i>Catalogue</i> and select Brand and Model of the TV you want to program (the model can be found on the instruction booklet or on the back or side of the device).
2	After inserting the batteries and found the 3 flashes of the transparent device keys left open the battery case compartment during the entire procedure.
3	Simultaneously pressing the Device key TV in the upper left and the red button (A) in the lower left. Release: <i>The selection keys are flashing.</i> Press now the OK button in the middle of the cruise to start being the process of receiving from the monitor. <i>The device key TV emits a flash to confirm that the code that is acquiring will be memorised on the TV bench..</i>
4	Now bring near the remote to his image in the web page and pressing the button START PROGRAMMING Throughout the whole programming phase the transparent device keys will flash continuously but unevenly (asynchronous) to indicate progress of code acquisition state The remote must be hold down in front of the screen.
5	Programming can be considered successfully completed when the transparent device keys start flashing regularly intermittent (see Note). Now slip off the batteries from their slot, enter them again after a few seconds and close the battery case compartment The procedure is finished: <i>The transparent device keys emit again 3 confirmation flashes: X-Light is ready to command your device.</i>
Note: <i>If you notice a single and prolonged flash, it means that there has been an error and you must repeat the procedure from the beginning</i>	

For each device to be commanded you must repeat this procedure.

If you want to program X-Light 2 for a satellite device, digital terrestrial, follow the above procedure whereas paragraph 3 varies as follows:

3a	Simultaneously pressing the device key DTT / SAT in the upper right and the red button (A) in the lower left corner and release: <i>The transparent device keys are flashing.</i> Press now the OK button in the middle of the cruise to start being the process of receiving from the monitor. <i>The device key DTT/SAT emits a flash to confirm that the code that is acquiring will be memorised on the DTT/SAT bench</i>
----	---

3. DIRECT PROGRAMMING

The code to program your device can be identified in the BRAND CODES sections of this instruction, looking for the brand or, if you know the exact brand and model, through research on line on the website www.visaelectronics.com , or even by downloading the electronic catalogue from the website.

1	Switch on your device. Press the device key on your remote control for the type of device you want to control for approximately 10 seconds. Release when the device keys light up: <i>the device keys start flashing</i>
2	In the following 10 seconds enter the 4 digits of the code you have identified The device key chosen emits 2 short flashes = OK X Light / X Wire is ready to control the device you have programmed it for.
Note <i>A prolonged flash emitted by the device keys at the end of the procedure signals an error. Check to make sure you selected the right code and then repeat the procedure..</i>	

Try out the functions of the remote and check that your device responds to the commands. If some of the functions do not correspond to your device, select other codes from the code booklet until you find the most complete one.

You must repeat the operation for each available device key, and thus for each device to be commanded

4. AUTOMATIC PROGRAMMING

If you do not know the brand of your device and have not found the code in the booklet:

1	Switch on your device. Press the device key on your remote control for the type of device you want to control for approximately 10 seconds. Release when the device keys light up: <i>the device keys start flashing</i>
2	Point the remote at the device and press "▲" followed by "⏻" <i>(keeping both pressed down).</i>
3	Always pointing the remote at the device, release "▲" only while keeping "⏻" pressed down.
4	Release "⏻" when the device switches off or turns on a function.
5	While the device keys flashing, try out the functions of the remote and check that your device responds to the commands.
6	a) If the device responds correctly to the commands Press the device key of step 1: The code is learned and X-Light/X-Wire is ready. b) If the device does NOT respond correctly: start over from step 2
Note <i>The complete automatic search could last several minutes (even 15-20 minutes); in order for it to be successful it is important to keep the remote pointed at the device. If you accidentally release the "⏻" button (Off) before the device is turned off, or before a function turns on you can continue the search process by starting over from step 2 within 15 seconds otherwise you must start over from the beginning.</i>	

When the search comes to the end the device keys have no longer signals transmission. If the device has not turned itself off, contact customer service

You must repeat the operation for each available device key, and thus for each device to be commanded

5. HOW TO READ BACK A MEMORIZED CODE

If you have followed the automatic programming , once the search is over and the code is set, it is useful to know it and to write it down for future reference.

1	Press the device key for the code belonging to the device that you want to read and keep it pressed for approximately 10 seconds. Release when the device keys light up: <i>the device keys start flashing.</i>
2	Press the device key again for the code belonging to the device that you want to read and observe well the next following flashes.
3	Look at the device key for the code you want to read The LED shows the saved 4-digit code with 4 series of brief flashes (<i>1/2 second pauses</i>) (e.g. for the code "1014": <i>1 flash ... 10 flashes ... 1 flash ... 4 flashes</i>).

6. EXTRA FUNCTIONS

Personal Settings to adjust volumes

1	Press the device key for the device for which you want to set volume adjustment (e.g. "DTT").
2	Press the Vol+ and Vol- buttons at the same time, and keep them pressed down: The device keys start flashing moving towards the left from one device key to the other.
3	Release both the Vol+ and Vol- buttons when the device key for the device on which you want to adjust the volume lights up. (e.g. if you release when the TV key lights up, the volume will be adjusted by the TV saved, directly pressing the Vol+/Vol- buttons, while the remote control continues to function with the DTT player).

The device key for the device you are controlling will light up when you press the Vol+ or Vol- buttons when adjusting the volume.



www.visaelectronics.com

www.xlightvisa.it

E mail: sales@visasrl.it

CODE: 771.861